

MODEL CP-60L [Max : 6.0 m / Min : 1.56 m]

取扱説明書

お買い上げいただき、誠にありがとうございます。

安全にお使いいただくために

ご使用前にこの取扱説明書をよくお読みの上、正しい使用方法でご使用ください。
この取扱説明書は必要なときにご覧いただけるよう、大切に保管してください。

注意



この表示を無視して、誤った取り扱いをすると人が障害を負う可能性が想定される内容、および物品の損害が想定される内容を示します。

【特長】

- 5段階伸縮式で1.58～6.0mまで無段階で長さ調節が可能です。
- 各段に最大寸法時にロックピンが作動する機構を採用し、安全性を強化しています。
- 各段のポール長を最適化し、収納時に各段で手を挟まない安全設計としています。
- 各段の固定ねじ部にカップリングねじを組み合わせた強化設計です。
- 白アルマイト加工により、耐摩耗性を向上させています。

使用方法

A. 長さの調整

1. 各段の固定ねじを反時計回りに回して緩め、ポールを伸ばします。任意の長さに合わせて、固定ねじを時計回りにしっかりと締め、ロックさせます。
2. 最大寸法まで伸ばす場合、ロックピンが飛び出て固定されるよう、ポールを回して穴位置を合わせます。
3. ロックピンを解除する場合、ロックピンの両側を指で押さえ、ポールをスライドさせます。


B. アンテナの取付

1. モービルアンテナをポール上部に取り付ける場合、パイプルーフレール基台(コメット RS-205等)を使用し、アンテナを固定してください。ノンラジアルアンテナの場合はこのままで構いませんが、ラジアルやアースが必要なアンテナの場合は、ラジアル板(棒)等をコネクター周辺に設置し、調整する必要があります。(ラジアルの数や位置で特性変化します。)
2. GPアンテナや八木アンテナを固定する場合、パイプの上部にアンテナに付属している取付金具を使用してアンテナを固定してください。先端は固定式のスリーブとスライド式のスリーブが各1カ所ありますので、適度にピッチを広げて金具を取り付けてください。

C. スティの張り方

スライド式スリーブの下にスタイリングがありますので、市販品のステイロープ3本を3方向(真上から見て120°毎)に張ってください。張った後は、転倒の恐れがないか確認してご使用ください。

【外観図】

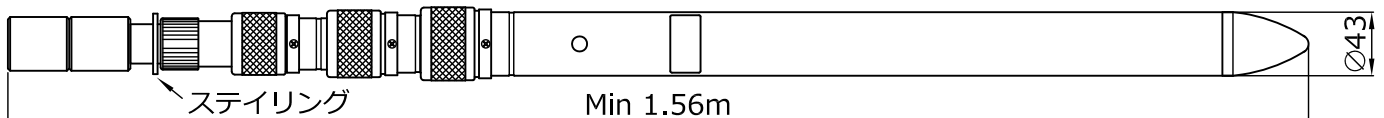

メンテナンス

固定ねじ部に砂や細かいゴミが入ってしまうと、スライドさせたときに傷が生じたり、固着して動かなくなってしまう可能性があります。ご使用後はグリス等を使用し、こまめに動作確認して収納してください。


【仕様】

- 先端スリーブ径 : $\Phi 35.5\text{mm} \times 2$
- 最大取付質量 : 20kg(ロックピン作動時)
10kg(ロックピン未使用時)
- 全長 : 伸縮時 約1.56m, 伸長時 約6.0m
- 質量 : 約2.5kg
- スティリング取付済
- ▼ 先端にM6の貫通雌ねじ穴が開いています。ご自由にお使いください。

パーツリスト

1. CP-60L 本体
2. スティリング(組込済み)

[長さ調整方法]

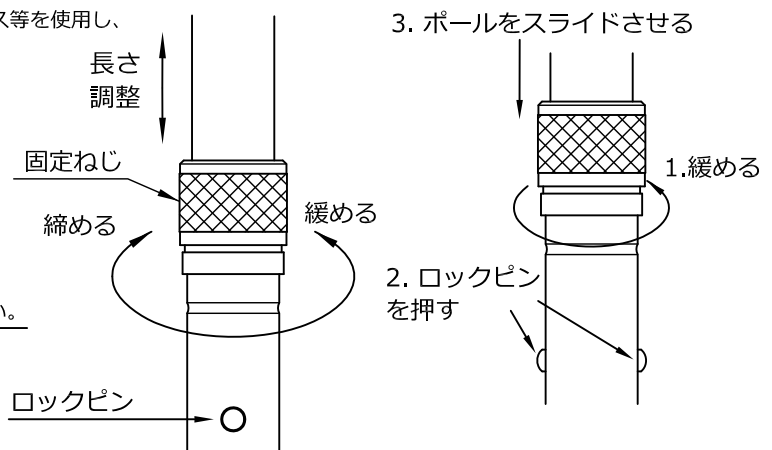

コメット株式会社

〒336-0026 埼玉県さいたま市南区辻4-18-2
TEL : 048-839-3131(代) / FAX : 048-839-3136
URL : <http://www.comet-ant.co.jp/>

■ 品質向上のため、予告なく仕様および外観を変更することがありますのでご了承ください。

Extendable Aluminum Pole

MODEL **CP-60L**

Length [Max : 6.0 m / Min : 1.56 m]

Instructions

Please follow this instructions for safety use.

Features

- Extendable with 4 screw connectors. (1.56m~6m)
- The lock-pin for the fall prevention is built-in.
- Anodized aluminum pole.



Warning

- Do not load more than instructed weight and try not to use CP-60 when wind is heavy.
- Make sure to tighten the screw connectors after adjusting the length.
- Keep the pole vertical, or it might cause a damage.
- CP-60 is unsuitable for long-term use, only for temporary use.
- Applying grease to screw connectors on regular basis is highly recommended.

Installation

A. How to adjust the length

A-1. Anticlockwise the screw connector to loosen.

A-2. Adjust the pole to your desired length and clockwise the screw connector to tighten.


B. How to set up the antenna

- Attach the antenna with a mount (another sales) to top of the pole.

C. How to use the stay-rope

- Tie ropes to the Guy wire ring of the pole. Be sure that the pole must be vertical.

【Appearance Diagram】

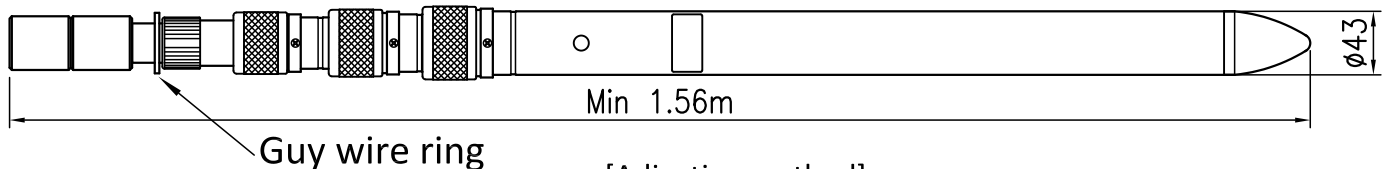

Specifications

Min. Length : 1.56 (m)
 Max. Length : 6.0 (m)
 Diameter :
 Top φ26 (mm)
 Bottom φ43 (mm)
 Weight : approx. 2.5 (kg)
 Max Load (No wind) : 10 (kg)

Parts List

1. CP-60L Pole
2. Guy wire ring for stay-rope (already installed)

[Adjusting method]

Adjust the pole to your desired length

Screw connector

Tighten

Loosen

Lock-Pin

3. slide the pole

1. Loosen

2. Push both Lock-pins

Loosen a screw connector to shorten the pole and to store it, push both lock-pins and slide the pole.

- Specifications or appearance is subject to change without notice.

COMET CO.,LTD.

4-18-2, Tsuji, Minami-ku, Saitama-shi, Saitama-Pref, 336-0026, JAPAN

TEL : 81-48-839-3131 / FAX : 81-48-839-3136

URL : <http://www.comet-ant.co.jp/english>